


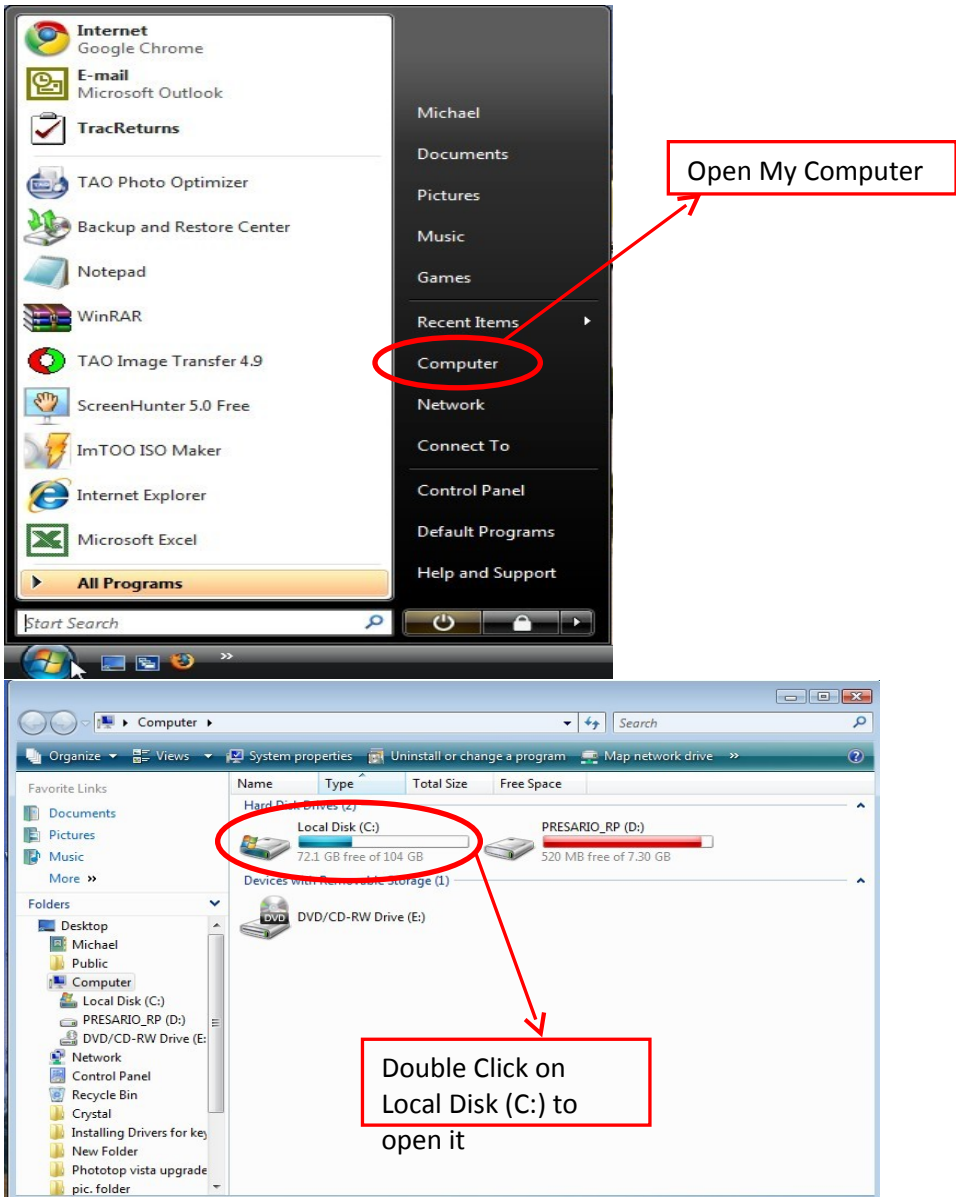


Please follow the following steps to manually install the keychain driver for Model # 89862, 80000 and 80001 on Windows Vista and/or Windows XP

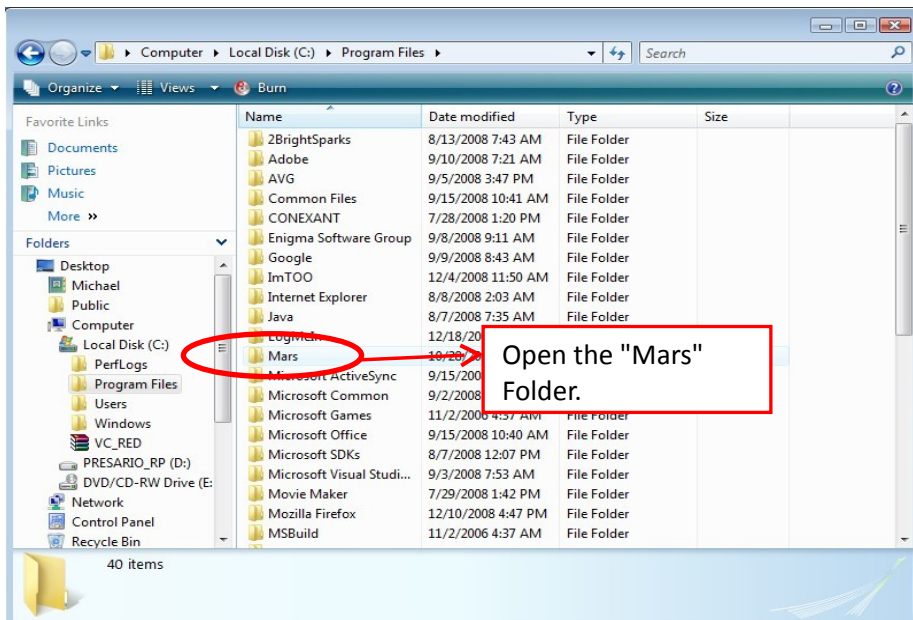


Please visit our website at www.TAOelectronics.com for further troubleshooting assistance or to review our other product lines.

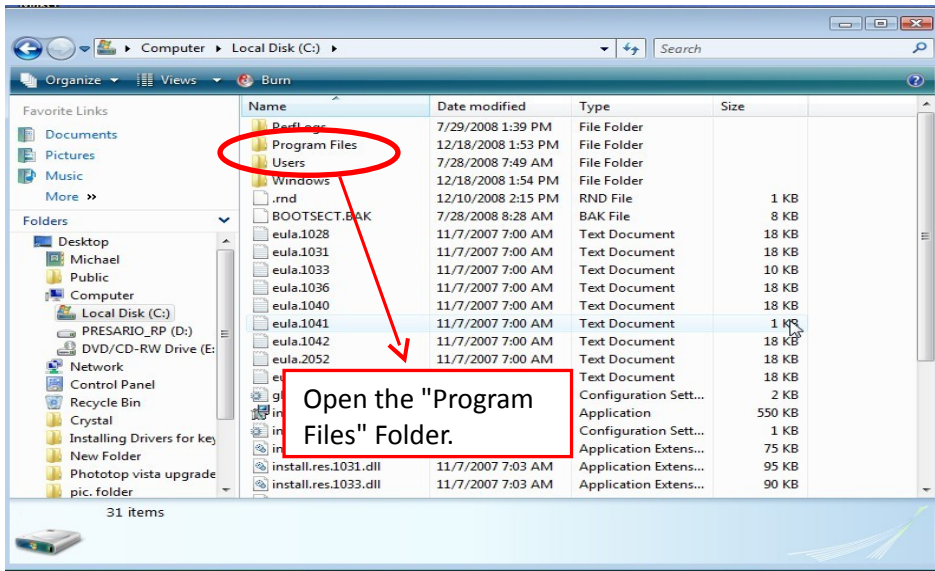

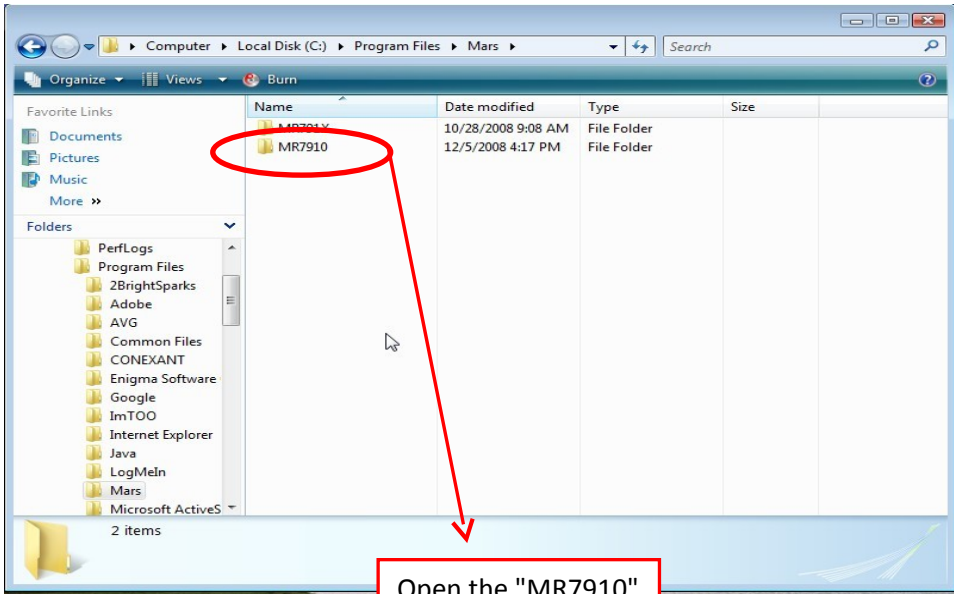

Open the "MR7910" Folder.

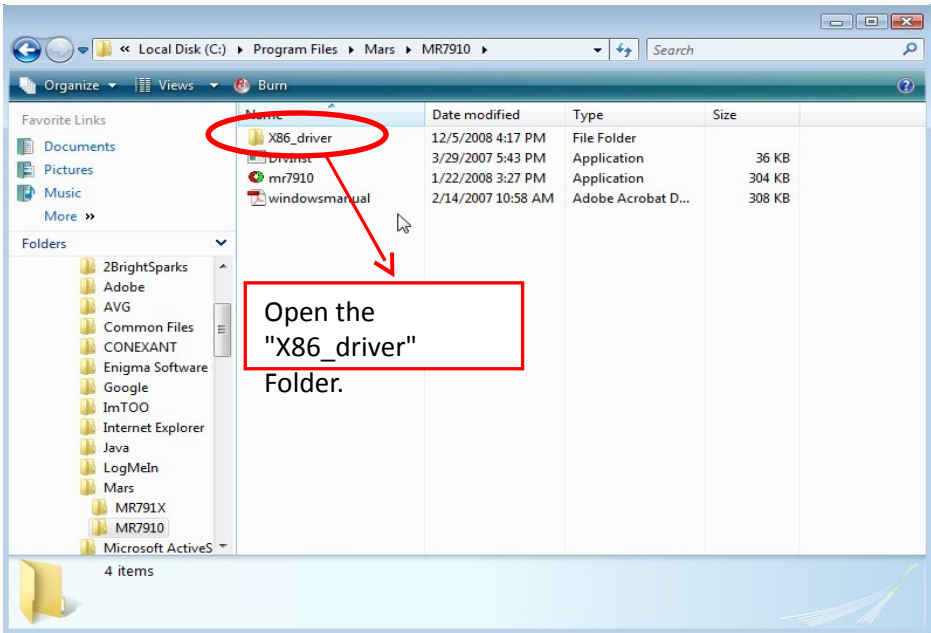

Open the "X86_driver" Folder.

